


PCI-DAS08

Analog Input and Digital I/O

User's Guide

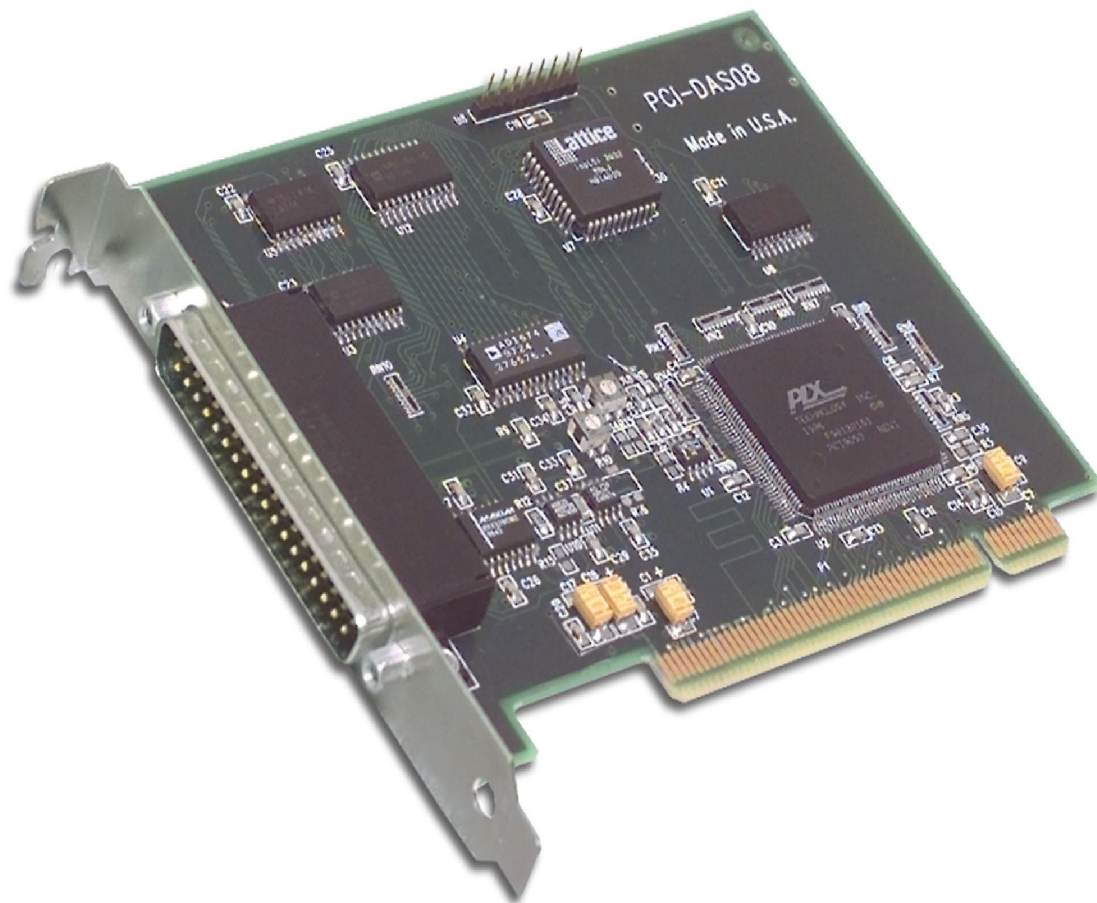

PCI-DAS08

Analog input and Digital I/O

User's Guide



**MEASUREMENT
COMPUTING™**

Document Revision 5, June, 2006

© Copyright 2006, Measurement Computing Corporation

Your new Measurement Computing product comes with a fantastic extra —

Management committed to your satisfaction!

Refer to www.mccdaq.com/execteam.html for the names, titles, and contact information of each key executive at Measurement Computing.

Thank you for choosing a Measurement Computing product—and congratulations! You own the finest, and you can now enjoy the protection of the most comprehensive warranties and unmatched phone tech support. It's the embodiment of our two missions:

- To offer the highest-quality, computer-based data acquisition, control, and GPIB hardware and software available—at the best possible price.
- To offer our customers superior post-sale support—FREE. Whether providing unrivaled telephone technical and sales support on our latest product offerings, or continuing that same first-rate support on older products and operating systems, we're committed to you!

Lifetime warranty: Every hardware product manufactured by Measurement Computing Corporation is warranted against defects in materials or workmanship for the life of the product. Products found defective are repaired or replaced promptly.

Lifetime Harsh Environment Warranty®: We will replace any product manufactured by Measurement Computing Corporation that is damaged (even due to misuse) for only 50% of the current list price. I/O boards face some tough operating conditions—some more severe than the boards are designed to withstand. When a board becomes damaged, just return the unit with an order for its replacement at only 50% of the current list price. We don't need to profit from your misfortune. By the way, we honor this warranty for any manufacturer's board that we have a replacement for.

30 Day Money Back Guarantee: You may return any Measurement Computing Corporation product within 30 days of purchase for a full refund of the price paid for the product being returned. If you are not satisfied, or chose the wrong product by mistake, you do not have to keep it. Please call for an RMA number first. No credits or returns accepted without a copy of the original invoice. Some software products are subject to a repackaging fee.

These warranties are in lieu of all other warranties, expressed or implied, including any implied warranty of merchantability or fitness for a particular application. The remedies provided herein are the buyer's sole and exclusive remedies. Neither Measurement Computing Corporation, nor its employees shall be liable for any direct or indirect, special, incidental or consequential damage arising from the use of its products, even if Measurement Computing Corporation has been notified in advance of the possibility of such damages.

Trademark and Copyright Information

TracerDAQ, Universal Library, Harsh Environment Warranty, Measurement Computing Corporation, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation.

Windows, Microsoft, and Visual Studio are either trademarks or registered trademarks of Microsoft Corporation

LabVIEW is a trademark of National Instruments.

CompactFlash is a registered trademark of SanDisk Corporation.

All other trademarks are the property of their respective owners.

Information furnished by Measurement Computing Corporation is believed to be accurate and reliable. However, no responsibility is assumed by Measurement Computing Corporation neither for its use; nor for any infringements of patents or other rights of third parties, which may result from its use. No license is granted by implication or otherwise under any patent or copyrights of Measurement Computing Corporation.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems which, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

Table of Contents

Preface

About this User's Guide	v
What you will learn from this user's guide	v
Conventions in this user's guide	v
Where to find more information	v

Chapter 1

Introducing the PCI-DAS08	1-1
Overview: PCI-DAS08 features	1-1
Software features	1-1
PCI-DAS08 block diagram	1-2

Chapter 2

Installing the PCI-DAS08	2-1
What comes with your shipment?	2-1
Hardware	2-1
Additional documentation	2-1
Optional components	2-1
Unpacking the PCI-DAS08	2-2
Installing the software	2-2
Installing the PCI-DAS08	2-2
Configuring the PCI-DAS08	2-3
Connecting the board for I/O operations	2-3
Connectors, cables – main I/O connector	2-3
Field wiring, signal termination and signal conditioning	2-4

Chapter 3

Programming and Developing Applications	3-1
Programming languages	3-1
Packaged application programs	3-1
Register-level programming	3-1

Chapter 4

Specifications	4-1
Analog input	4-1
Digital input / output	4-1
Counter section	4-2
Power consumption	4-2
Environmental	4-2
Main connector and pin out	4-3

About this User's Guide

What you will learn from this user's guide

This user's guide explains how to install, configure, and use the PCI-DAS08 so that you get the most out of the analog input and digital I/O features.

This user's guide also refers you to related documents available on our web site, and to technical support resources.

Conventions in this user's guide

For more information on ...

Text presented in a box signifies additional information and helpful hints related to the subject matter you are reading.

Caution! Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

<#:#> Angle brackets that enclose numbers separated by a colon signify a range of numbers, such as those assigned to registers, bit settings, etc.

bold text **Bold** text is used for the names of objects on the screen, such as buttons, text boxes, and check boxes. For example:
1. Insert the disk or CD and click the **OK** button.

italic text *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase. For example:
The *InstaCal* installation procedure is explained in the *Quick Start Guide*.
Never touch the exposed pins or circuit connections on the board.

Where to find more information

The following electronic documents provide information that is relevant to the operation of the PCI-DAS08.

- MCC's *Specifications: PCI-DAS08* (the PDF version of the *Specifications* chapter in this guide) is available on our web site at www.mccdaq.com/pdfs/PCI-DAS08.pdf.
- MCC's *Quick Start Guide* is available on our web site at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.
- MCC's *Guide to Signal Connections* is available on our web site at www.mccdaq.com/signals/signals.pdf.
- MCC's *Universal Library User's Guide* is available on our web site at www.mccdaq.com/PDFmanuals/sm-ul-user-guide.pdf.
- MCC's *Universal Library Function Reference* is available on our web site at www.mccdaq.com/PDFmanuals/sm-ul-functions.pdf.
- MCC's *Universal Library for LabVIEW™ User's Guide* is available on our web site at www.mccdaq.com/PDFmanuals/SM-UL-LabVIEW.pdf.

PCI-DAS08 User's Guide (this document) is also available on our web site at www.mccdaq.com/PDFmanuals/PCI-DAS08.pdf.

Introducing the PCI-DAS08

Overview: PCI-DAS08 features

This manual explains how to configure, install, and use your PCI-DAS08 board. The PCI-DAS08 is a multifunction measurement and control board designed to operate in computers with PCI bus accessory slots.

The PCI-DAS08 board provides the following features:

- Eight single-ended 12-bit analog inputs
- 12-bit A/D resolution
- Sample rates of up to 40 kHz
- $\pm 5\text{V}$ input range
- Three 16-bit counters
- Seven digital I/O bits (three input, four output)
- Connector compatible with Measurement Computing's ISA-based CIO-DAS08 board

The PCI-DAS08 board is completely plug-and-play, with no jumpers or switches to set. All board addresses are set by the board's plug-and-play software.

Software features

For information on the features of *InstaCal* and the other software included with your PCI-DAS08, refer to the *Quick Start Guide* that shipped with your device. The *Quick Start Guide* is also available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.

Check www.mccdaq.com/download.htm for the latest software version or versions of the software supported under less commonly used operating systems.

PCI-DAS08 block diagram

PCI-DAS08 functions are illustrated in the block diagram shown here.

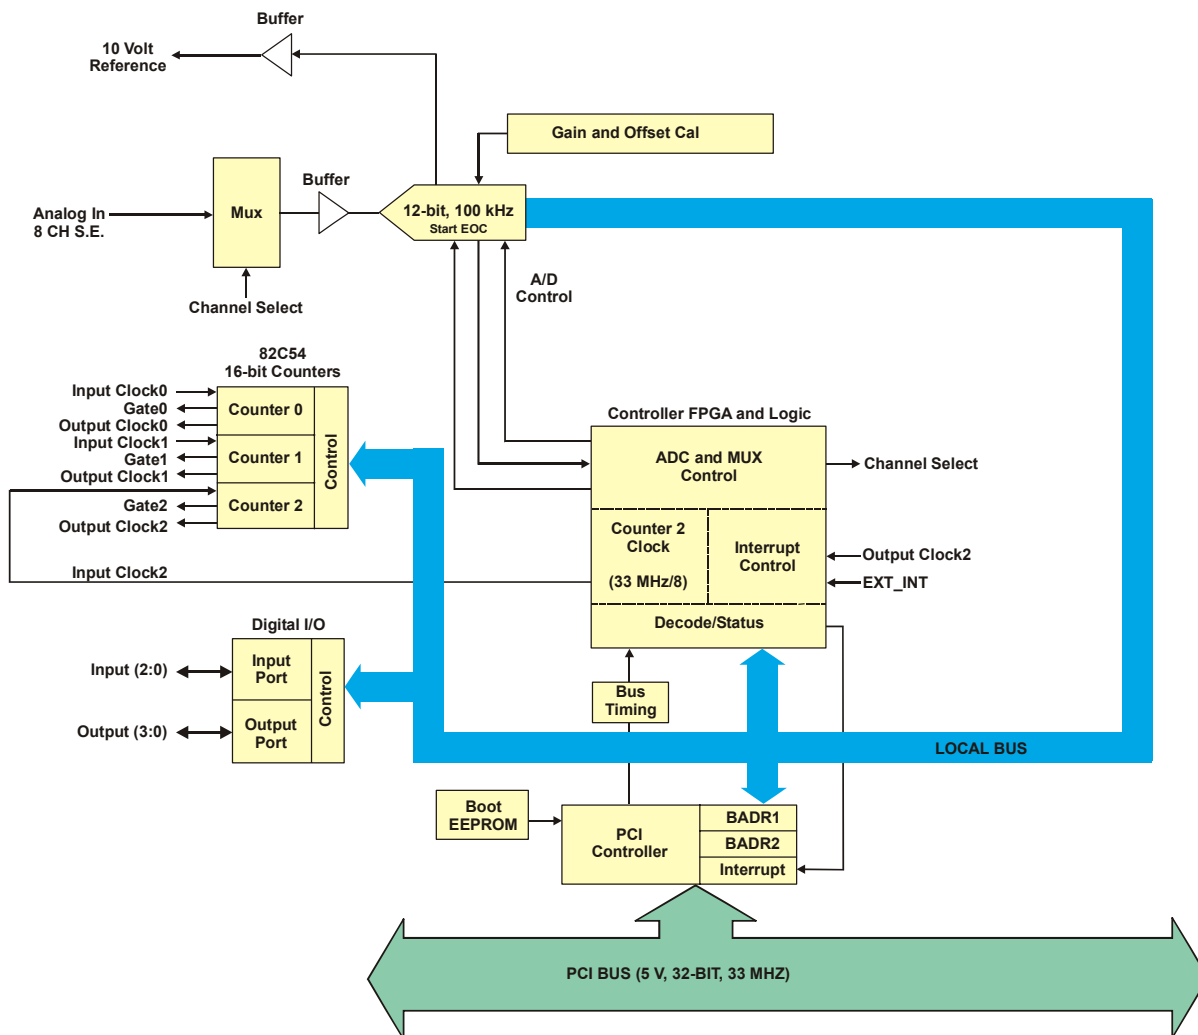


Figure 1-1. PCI-DAS08 block diagram


Installing the PCI-DAS08

What comes with your shipment?

The following items are shipped with the PCI-DAS08:

Hardware

- PCI-DAS08

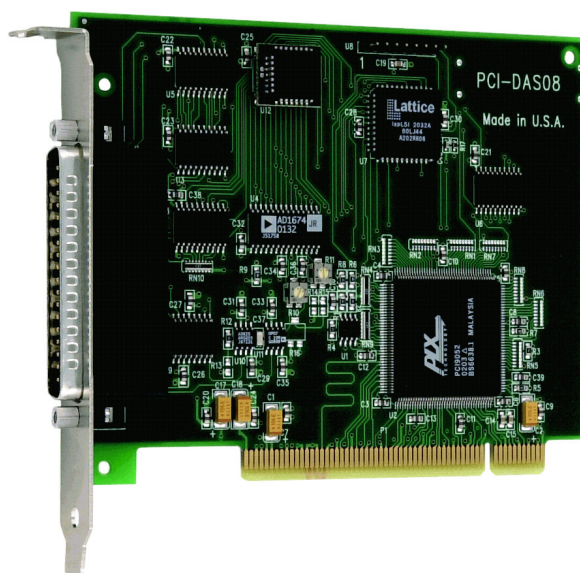


Additional documentation

In addition to this hardware user's guide, you should also receive the *Quick Start Guide* (available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf). This booklet supplies a brief description of the software you received with your PCI-DAS08 and information regarding installation of that software. Please read this booklet completely before installing any software or hardware.

Optional components

- Cables

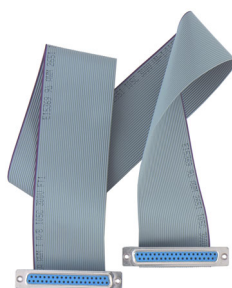

C37FF-x



C37FFS-x

- Signal termination and conditioning accessories

MCC provides signal termination products for use with the PCI-DAS08. Refer to the "[Field wiring, signal termination and signal conditioning](#)" section for a complete list of compatible accessory products.

Unpacking the PCI-DAS08

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the PCI-DAS08 from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

If any components are missing or damaged, notify Measurement Computing Corporation immediately by phone, fax, or e-mail:

- Phone: 508-946-5100 and follow the instructions for reaching Tech Support.
- Fax: 508-946-9500 to the attention of Tech Support
- Email: techsupport@mccdaq.com
-

Installing the software

Refer to the *Quick Start Guide* for instructions on installing the software on the *Measurement Computing Data Acquisition Software CD*. This booklet is available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.

Installing the PCI-DAS08

The PCI-DAS08 board is completely plug-and-play. There are no switches or jumpers to set. To install your board, follow the steps below.

Install the MCC DAQ software before you install your board

The driver needed to run your board is installed with the MCC DAQ software. Therefore, you need to install the MCC DAQ software before you install your board. Refer to the *Quick Start Guide* for instructions on installing the software.

1. Turn your computer off, remove the cover, and insert your board into an available PCI slot.
2. Close your computer and turn it on.

If you are using an operating system with support for plug-and-play (such as Windows 2000 or Windows XP), a dialog box pops up as the system loads indicating that new hardware has been detected. If the information file for this board is not already loaded onto your PC, you will be prompted for the disk containing this file. The MCC DAQ software contains this file. If required, insert the *Measurement Computing Data Acquisition Software CD* and click **OK**.

3. To test your installation and configure your board, run the *InstaCal* utility installed in the previous section. Refer to the *Quick Start Guide* that came with your board for information on how to initially set up and load *InstaCal*.

If your board has been powered-off for more than 10 minutes, allow your computer to warm up for at least 15 minutes before acquiring data. This warm-up period is required for the board to achieve its rated accuracy. The high speed components used on the board generate heat, and it takes this amount of time for a board to reach steady state if it has been powered off for a significant amount of time.

Configuring the PCI-DAS08

All hardware configuration options on the PCI-DAS08 are software controlled. There are no switches or jumpers to set.

Connecting the board for I/O operations

Connectors, cables – main I/O connector

Table 2-1 lists the board connectors, applicable cables and compatible accessory boards.

Table 2-1. Board Connectors, cables, accessory equipment

Connector type	37-pin male "D" connector
Compatible cables	<ul style="list-style-type: none"> ▪ C37FF-x 37-pin cable. x = length in feet (Figure 2-2). ▪ C37FFS-x 37-pin shielded cable. x = length in feet (Figure 2-3).
Compatible accessory products (with the C37FF-x cable)	CIO-MINI37 SCB-37 ISO-RACK08
Compatible accessory products (with the C37FFS-x cable)	CIO-MINI37 SCB-37 ISO-RACK08 CIO-EXP16 CIO-EXP32 CIO-EXP-GP CIO-EXP-BRIDGE16 CIO-EXP-RTD16

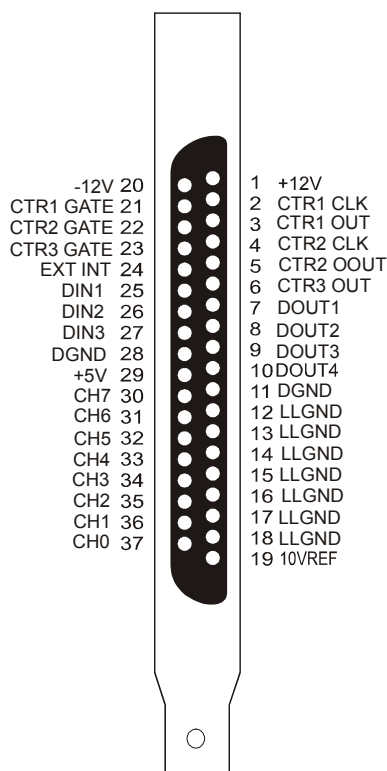


Figure 2-1. Main connector pinout

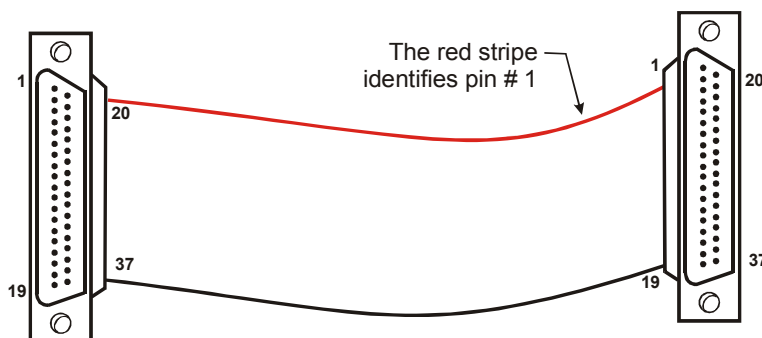


Figure 2-2. C37FF-x cable

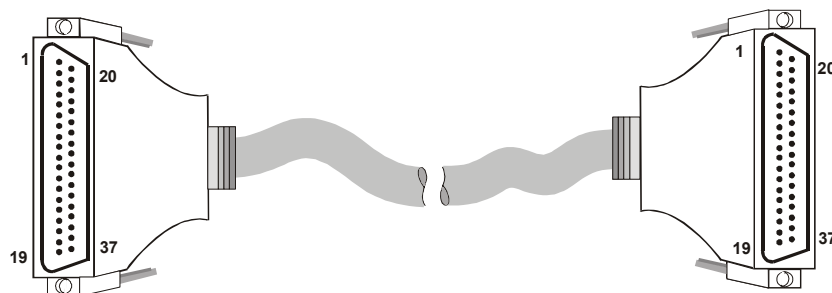


Figure 2-3. C37FFS-x cable

Caution! If either the AC or DC voltage is greater than 5 volts, do not connect the PCI-DAS08 to this signal source. You are beyond the board's usable input range and will need to either adjust your grounding system or add special isolation signal conditioning to take useful measurements. A ground offset voltage of more than 7 volts may damage the PCI-DAS08 board and possibly your computer. An offset voltage much greater than 7 volts will damage your electronics, and may be hazardous to your health.

Field wiring, signal termination and signal conditioning

You can use the following MCC screw terminal boards to terminate field signals and route them into the PCI-DAS08 board using the C37FF-x or C37FFS-x cable:

- **CIO-MINI37** – 37-pin screw terminal board. Details on this product are available at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=102&pf_id=255.
- **SCB-37** – 37 conductor, shielded signal connection/screw terminal box that provides two independent 50-pin connections. Details on this product are available at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=196&pf_id=1166.

MCC provides the following analog signal conditioning products for use with your PCI-DAS08 board:

- **ISO-RACK08** – Isolated 8-channel, 5B module rack for analog signal conditioning and expansion. Details on this product are available on our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=127&pf_id=449.
- **CIO-EXP16** – 16-channel analog multiplexer board with on-board CJC sensor. Details on this product are available on our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=126&pf_id=249.
- **CIO-EXP32** – 32-channel analog multiplexer board with on-board CJC sensor and 2 Gain amps. Details on this product are available on our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=126&pf_id=250.

- **CIO-EXP-GP** – 8-channel expansion multiplexer board with resistance signal conditioning. Details on this product are available on our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=126&pf_id=244.
- **CIO-EXP-BRIDGE16** – 16-channel expansion multiplexer board with Wheatstone bridge signal conditioning. Details on this product are available on our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=126&pf_id=243.
- **CIO-EXP-RTD16** – 16-channel expansion multiplexer board with RTD signal conditioning. Details on this product are available on our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=126&pf_id=248.

Information on signal connections

General information regarding signal connection and configuration is available in the *Guide to Signal Connections*. This document is available at <http://www.measurementcomputing.com/signals/signals.pdf>.

Programming and Developing Applications

After following the installation instructions in Chapter 2, your board should now be installed and ready for use. Although the board is part of the larger DAS family, there is no correspondence among registers for different boards. Software written at the register level for other DAS models will not function correctly with the PCI-DAS08 board.

Programming languages

Measurement Computing's Universal Library™ provides access to board functions from a variety of Windows programming languages. If you are planning to write programs, or would like to run the example programs for Visual Basic® or any other language, refer to the *Universal Library User's Guide* (available on our web site at www.mccdaq.com/PDFmanuals/sm-ul-user-guide.pdf).

Packaged application programs

Many packaged application programs, such as SoftWIRE® and HP-VEE™, now have drivers for your board. If the package you own does not have drivers for the board, please fax or e-mail the package name and the revision number from the install disks. We will research the package for you and advise how to obtain drivers.

Some application drivers are included with the Universal Library package, but not with the application package. If you have purchased an application package directly from the software vendor, you may need to purchase our Universal Library and drivers. Please contact us by phone, fax or e-mail:

- Phone: 508-946-5100 and follow the instructions for reaching Tech Support.
- Fax: 508-946-9500 to the attention of Tech Support
- Email: techsupport@mccdaq.com

Register-level programming

You should use the Universal Library or one of the packaged application programs mentioned above to control your board. Only experienced programmers should try register-level programming.

If you need to program at the register level in your application, you can find more information in the *Register Map for the PCI-DAS08 Series* (available at www.mccdaq.com/registermaps/RegMapPCI-DAS08.pdf).

Specifications

Typical for 25 °C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

Analog input

Table 1. Analog input specifications

Parameter	Specification
<i>A/D converter type</i>	<i>AD1674J</i>
Resolution	12 bits
Ranges	±5 V
A/D pacing	Software polled
<i>A/D triggering modes</i>	<i>Digital: Software polling of digital input (DIN1) followed by pacer loading and configuration.</i>
Data transfer	Software polled
Polarity	Bipolar
Number of channels	8 single-ended
<i>A/D conversion time</i>	<i>10 μs</i>
Throughput	40 kHz typical, PC dependent
Relative accuracy	±1 LSB
Differential linearity error	No missing codes guaranteed
Integral linearity error	±1 LSB
<i>Gain drift (A/D specs)</i>	<i>±180 ppm/°C</i>
<i>Zero drift (A/D specs)</i>	<i>±60 ppm/°C</i>
<i>Input leakage current</i>	<i>±60 nA max over temperature</i>
<i>Input impedance</i>	<i>10 MegOhm min</i>
<i>Absolute maximum input voltage</i>	<i>±35 V</i>
Noise distribution	(Rate = 1-50 kHz, Average % ± 2 bins, Average % ± 1 bin, Average # bins) Bipolar (5 V): 100% / 100% / 3 bins

Digital input / output

Table 2. Digital I/O specifications

Parameter	Specification
<i>Digital type (main connector):</i>	<i>Output: 74ACT273</i>
	<i>Input: 74LS244</i>
<i>Configuration</i>	<i>3 fixed input, 4 fixed output</i>
<i>Number of channels</i>	<i>7</i>
<i>Output high</i>	<i>3.94 volts min @ -24 mA (Vcc = 4.5 V)</i>
<i>Output low</i>	<i>0.36 volts max @ 24 mA (Vcc = 4.5 V)</i>
<i>Input high</i>	<i>2.0 volts min, 7 volts absolute max</i>
<i>Input low</i>	<i>0.8 volts max, -0.5 volts absolute min</i>
Interrupts	INTA# - mapped to IRQn via PCI BIOS at boot-time
Interrupt enable	Programmable through PCI controller: 0 = disabled 1 = enabled (default)

Interrupt sources	External source (EXT INT) Polarity programmable through PCI controller: 1 = active high 0 = active low (default)
-------------------	---

Counter section

Table 3. Counter specifications

Parameter	Specification
<i>Counter type</i>	<i>82C54 device</i>
<i>Configuration</i>	<i>3 down counters, 16-bits each</i>
Counter 0 - User counter 1	Source: Available at user connector (CTR1CLK) Gate: Available at user connector (CTR1GATE) Output: Available at user connector (CTR1OUT)
Counter 1 - User counter 2	Source: Available at user connector (CTR2CLK) Gate: Available at user connector (CTR2GATE) Output: Available at user connector (CTR2OUT)
Counter 2 - User counter 3 or Interrupt Pacer	Source: Buffered PCI clock (33 MHz) divided by 8. Gate: Available at user connector (CTR3GATE) Output: Available at user connector (CTR3OUT) and may be software configured as Interrupt Pacer.
<i>Clock input frequency</i>	<i>10 MHz max</i>
<i>High pulse width (clock input)</i>	<i>30 ns min</i>
<i>Low pulse width (clock input)</i>	<i>50 ns min</i>
<i>Gate width high</i>	<i>50 ns min</i>
<i>Gate width low</i>	<i>50 ns min</i>
<i>Input low voltage</i>	<i>0.8 V max</i>
<i>Input high voltage</i>	<i>2.0 V min</i>
<i>Output low voltage</i>	<i>0.4 V max</i>
<i>Output high voltage</i>	<i>3.0 V min</i>

Power consumption

Table 4. Power consumption specifications

Parameter	Specification
+5 V operating (A/D converting to FIFO)	251 mA typical, 436 mA max
+12 V	13 mA typical, 19 mA max
-12 V	17 mA typical, 23 mA max

Environmental

Table 5. Environmental specifications

Parameter	Specification
Operating temperature range	0 to 50 °C
Storage temperature range	-20 to 70 °C
Humidity	0 to 90% non-condensing

Main connector and pin out

Table 6. Main connector specifications

Parameter	Specification
Connector type	37-pin male "D" connector
Compatible cables	<ul style="list-style-type: none"> ▪ C37FF-x cable ▪ C37FFS-x cable
Compatible accessory products with the C37FF-x cable	CIO-MINI37 SCB-37 ISO-RACK08
Compatible accessory products with the C37FFS-x cable	CIO-MINI37 SCB-37 ISO-RACK08 CIO-EXP16 CIO-EXP32 CIO-EXP-GP CIO-EXP-BRIDGE16 CIO-EXP-RTD16

Table 7. Main connector pin out

Pin	Signal Name	Pin	Signal Name
1	+12V	20	-12V
2	CTR1 CLK	21	CTR1 GATE
3	CTR1 OUT	22	CTR2 GATE
4	CTR2 CLK	23	CTR3 GATE
5	CTR2 OUT	24	EXT INT
6	CTR3 OUT	25	DIN1
7	DOUT1	26	DIN2
8	DOUT2	27	DIN3
9	DOUT3	28	DGND
10	DOUT4	29	+5V
11	DGND	30	CH7
12	LLGND	31	CH6
13	LLGND	32	CH5
14	LLGND	33	CH4
15	LLGND	34	CH3
16	LLGND	35	CH2
17	LLGND	36	CH1
18	LLGND	37	CH0
19	10V REF		

CE Declaration of Conformity

Manufacturer: Measurement Computing Corporation
Address: 10 Commerce Way
Suite 1008
Norton, MA 02766
USA

Category: Electrical equipment for measurement, control and laboratory use.

Measurement Computing Corporation declares under sole responsibility that the product

PCI-DAS08

to which this declaration relates is in conformity with the relevant provisions of the following standards or other documents:

EU EMC Directive 89/336/EEC: Electromagnetic Compatibility, EN55022 (1995), EN55024 (1998)

Emissions: Group 1, Class B

- EN55022 (1995): Radiated and Conducted emissions.

Immunity: EN55024

- EN61000-4-2 (1995): Electrostatic Discharge immunity, Criteria A.
- EN61000-4-3 (1997): Radiated Electromagnetic Field immunity Criteria A.
- EN61000-4-4 (1995): Electric Fast Transient Burst immunity Criteria A.
- EN61000-4-5 (1995): Surge immunity Criteria A.
- EN61000-4-6 (1996): Radio Frequency Common Mode immunity Criteria A.
- EN61000-4-8 (1994): Power Frequency Magnetic Field immunity Criteria A.
- EN61000-4-11 (1994): Voltage Dip and Interrupt immunity Criteria A.

Declaration of Conformity based on tests conducted by Chomerics Test Services, Woburn, MA 01801, USA in September, 2001. Test records are outlined in Chomerics Test Report #EMI3053.01.

We hereby declare that the equipment specified conforms to the above Directives and Standards.



Carl Haapaoja, Director of Quality Assurance

Measurement Computing Corporation
10 Commerce Way
Suite 1008
Norton, Massachusetts 02766
(508) 946-5100
Fax: (508) 946-9500
E-mail: info@mccdaq.com
www.mccdaq.com